

950N-4805 NEOBE LIGHTBAR
0104 - FACTORY SET FLASH PATTERN

Progressive Slide Switch application

Mode 1

+12 vdc **ORANGE** Control Wire Activated

Front & Corner Warning Lamps: *Off*

Rear & End Warning Lamps: *Outboard without End - 6 pulse Neobe*

Mode 2

+12 vdc **ORANGE & BLUE** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard without Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *Outboard with End - 6 pulse Neobe*

Mode 3

+12 vdc **ORANGE, BLUE & WHITE/BLACK** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *Outboard with End - 6 pulse Neobe*

Any other combinations of the ORG, BLUE and WHITE/BLACK control wires = Mode 2.

See 950N-4805 Appendix A for additional 950N-4805 Control & Power Wire functions.

NOTE: The 0104 configuration is intended to be ordered with the optional DR1, RC, PR1 Halogen Lamps and Halogen Controller, activated as follows.

VIO	RIGHT ARROW
RED	LEFT ARROW
VIO & RED	CENTER OUT