

# Revolution™

## RRFB Crosswalk LED Lighthouse, Steady

### Installation Instructions

#### WIRES

##### STEADY BURN - EXTERNAL FLASHER

RED            Connect to Battery +12Vdc thru +24Vdc to activate  
 BLACK        Connect to Battery GROUND  
 BLUE         Dimming

#### ELECTRICAL

Input Voltage:        +12Vdc thru +24Vdc

Input Current:	Steady Normal Mode		Steady Dim Mode	
	12Vdc	24Vdc	12Vdc	24Vdc
RRFB-A-SB	0.37A	0.225A	0.10A	0.076A

Note: Complete installation with wire rated for 125% of amperage draw

#### OPERATION

When power is applied across the RED and BLACK wires, the RRFB lamp will turn on Steady.

#### DIMMING THE RRFB LAMP

With power applied across the RED and BLACK wires, applying +Vdc to the BLUE wire will Dim the intensity of the lamp.