

Revolution™

RRFB Crosswalk LED Lighthouse, Steady-Burn, PWM Intensity Control

Installation Instructions

WIRES

STEADY BURN - EXTERNAL FLASHER

RED Connect to Battery +12Vdc thru +24Vdc to activate
BLACK Connect to Battery GROUND

ELECTRICAL

Input Voltage: +12Vdc thru +24Vdc

Input Current:	Steady-Burn	
	12Vdc	24Vdc
RRFB-A-SBND	0.37A	0.225A

Note: Complete installation with wire rated for 125% of amperage draw

OPERATION

When power is applied across the RED and BLACK wires, the RRFB lamp will turn on Steady. LED intensity may be reduced by pulse width modulation of input power.